

WARNING:

- * Please DO cut off power to avoid electric shock and endanger life safety before installation
- * Installation height should be higher than 1.2m.
- * For pole mounting, please complete wiring at the accessible hand-hole on the pole.



1. Cut off the power, connect wires correctly then insulate them.
2. Insert the fixture onto the light pole and securely tighten the pole locking screws.
3. Remove the CCT & Wattage selector switch cap, select the power and CCT you need then screw on.
Remove the light sensor cap if you need the light sensor function.
4. Connect the power and turn on the light.

Slip fitter


1. Cut off the power, connect wires correctly then insulate them.
2. Install the light fixture and tighten the screws.
3. Remove the CCT & Wattage selector switch cap, select the power and CCT you need then screw on.
Remove the light sensor cap if you need the light sensor function.
4. Connect the power and turn on the light.

1. Cut off the power, connect wires correctly then insulate them.
2. Install the light fixture and tighten the screws.
3. Remove the CCT & Wattage selector switch cap, select the power and CCT you need then screw on.
Remove the light sensor cap if you need the light sensor function.
4. Connect the power and turn on the light.



All in one (Round & Square)

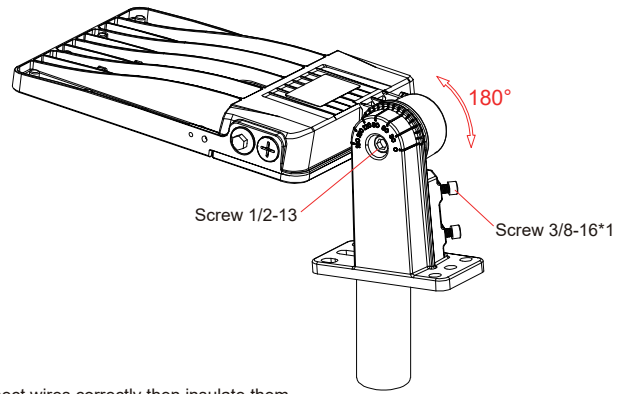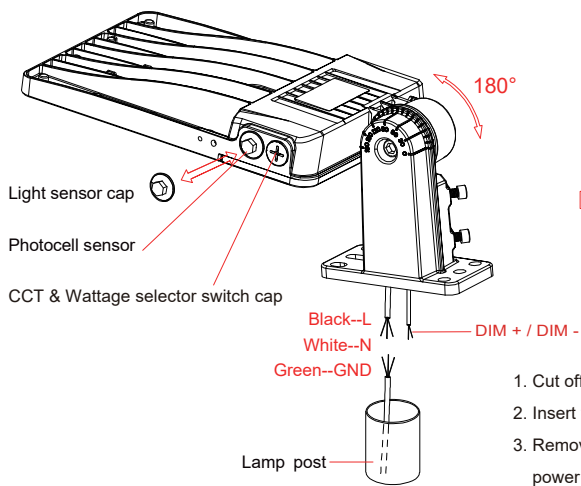

 
1. Cut off the power, connect wires correctly then insulate them.
2. Insert the fixture onto the light pole and securely tighten the pole locking screws.
3. Remove the CCT & Wattage selector switch cap, select the power and CCT you need then screw on.
Remove the light sensor cap if you need the light sensor function.
4. Connect the power and turn on the light.





Rectangular Bracket Block (Unit: mm)

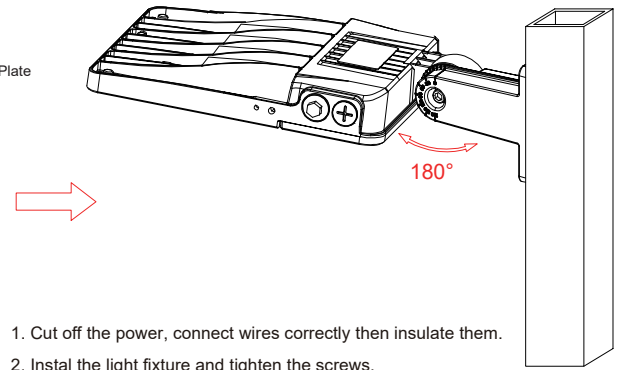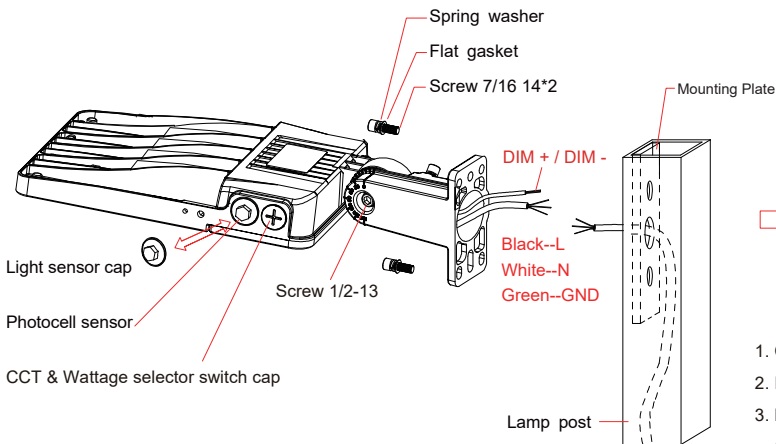

1. Cut off the power, connect wires correctly then insulate them.
2. Install the light fixture and tighten the screws.
3. Remove the CCT & Wattage selector switch cap, select the power and CCT you need then screw on.
Remove the light sensor cap if you need the light sensor function.
4. Connect the power and turn on the light.

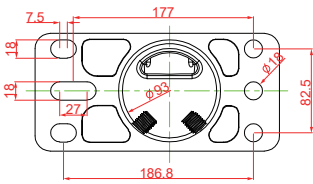


Hole size (Unit: mm)

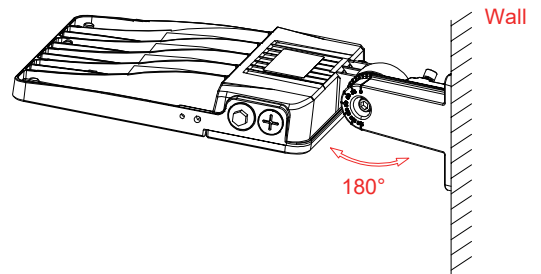
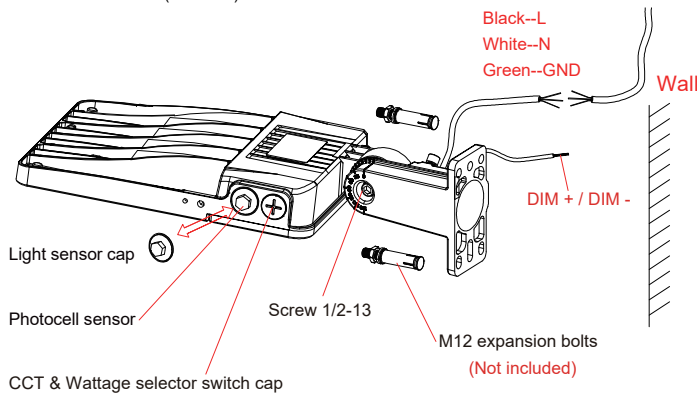


1. Cut off the power, connect wires correctly then insulate them.
2. Drill M12 expansion bolts into the wall. Install the fixture onto the wall and tighten the nuts
3. Remove the CCT & Wattage selector switch cap, select the power and CCT you need then screw on.
Remove the light sensor cap if you need the light sensor function.
4. Connect the power and turn on the light.


Universal (Trunnion & Slip fitter & Square)

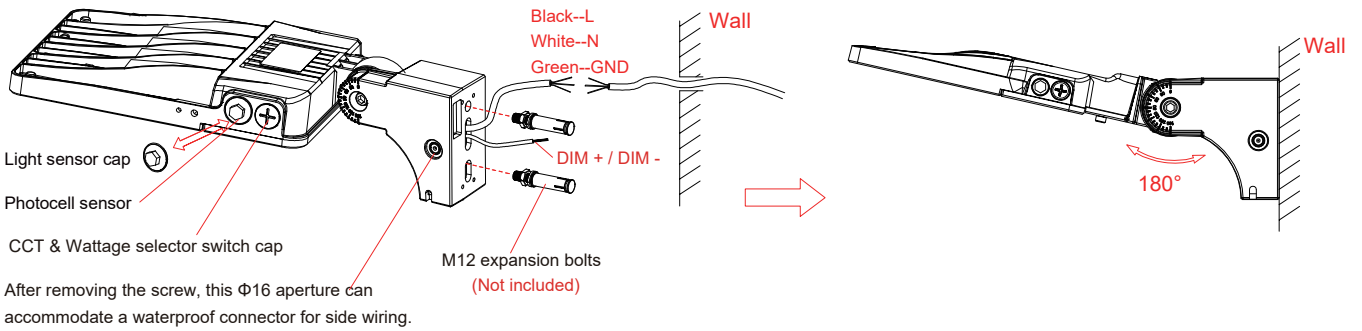

1. Cut off power. Connect the fixture to the mains electricity supply and ensure proper insulation.
2. Open the L-bracket cover plate. Drill M12 expansion bolts into the wall. Secure the fixture to the lamp pole using two screws through the mounting plate.
3. Reinstall the bracket cover plate and tighten the screws.
4. Twist open the power adjustment screw plug and adjust to the desired power level. If a light sensor is required, remove the light sensor cover.
5. Turn on the mains power switch to power on the fixture.

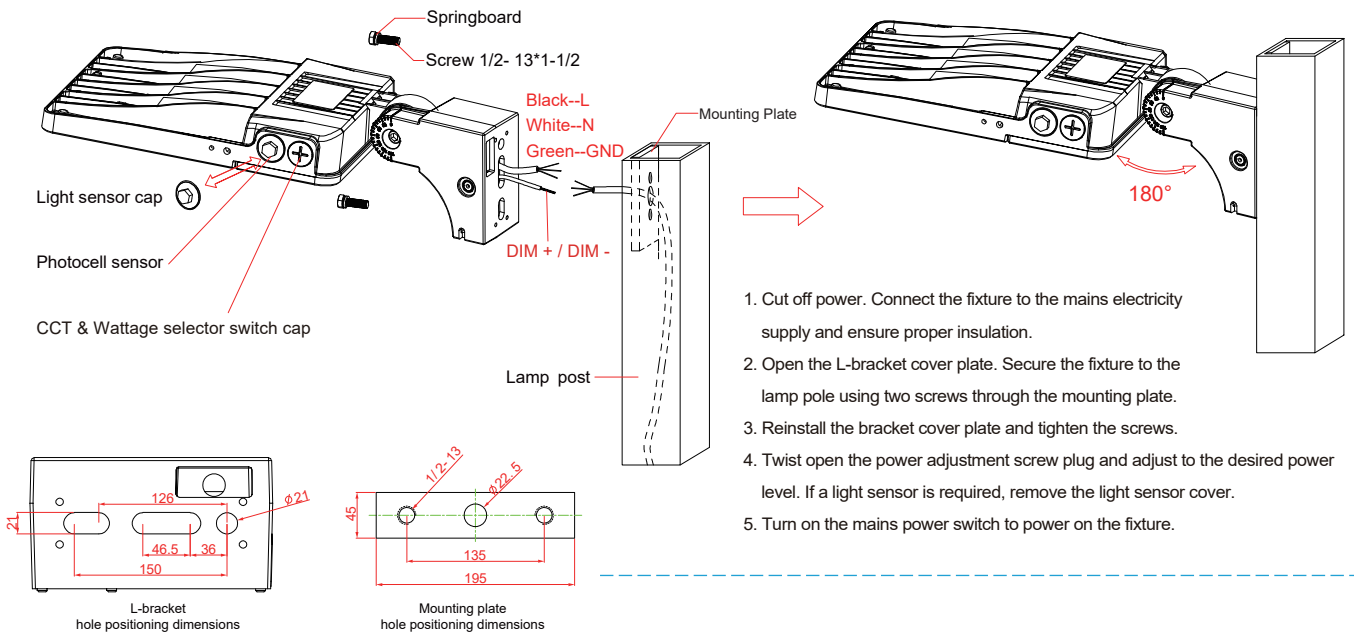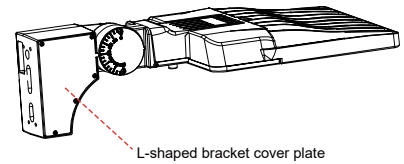


1. Cut off power. Connect the fixture to the mains electricity supply and ensure proper insulation.
2. Open the L-bracket cover plate. Secure the fixture to the lamp pole using two screws through the mounting plate.
3. Reinstall the bracket cover plate and tighten the screws.
4. Twist open the power adjustment screw plug and adjust to the desired power level. If a light sensor is required, remove the light sensor cover.
5. Turn on the mains power switch to power on the fixture.

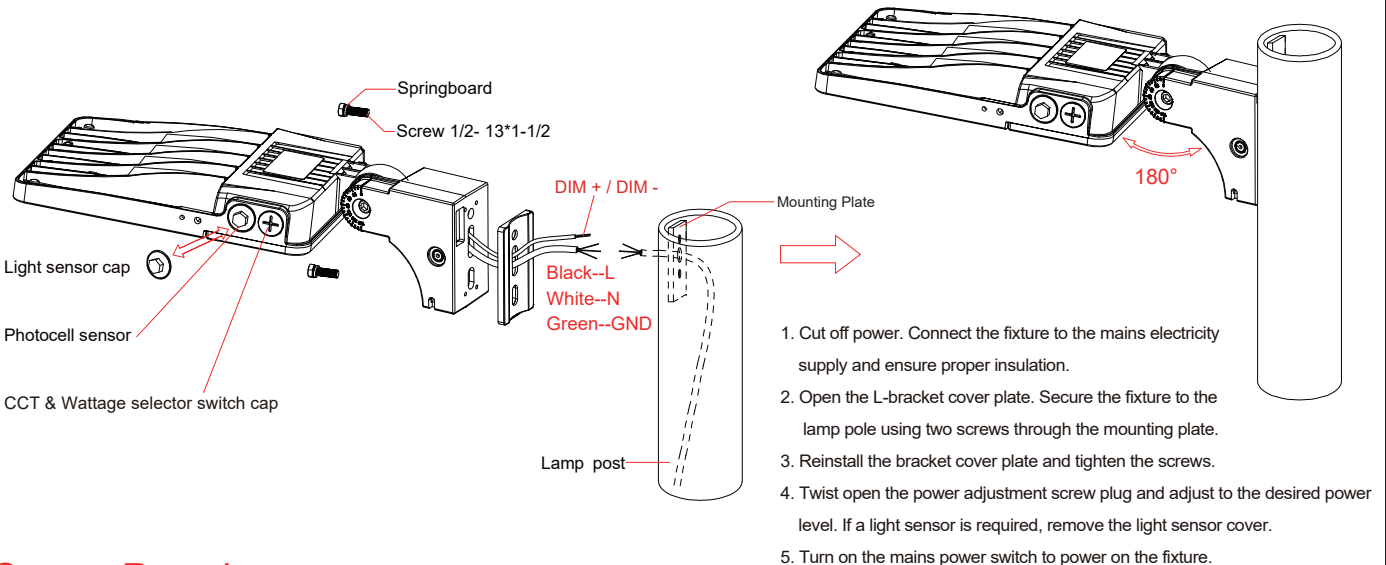

1. Cut off power. Connect the fixture to the mains electricity supply and ensure proper insulation.
2. Open the L-bracket cover plate. Secure the fixture to the lamp pole using two screws through the mounting plate.
3. Reinstall the bracket cover plate and tighten the screws.
4. Twist open the power adjustment screw plug and adjust to the desired power level. If a light sensor is required, remove the light sensor cover.
5. Turn on the mains power switch to power on the fixture.

Square Round

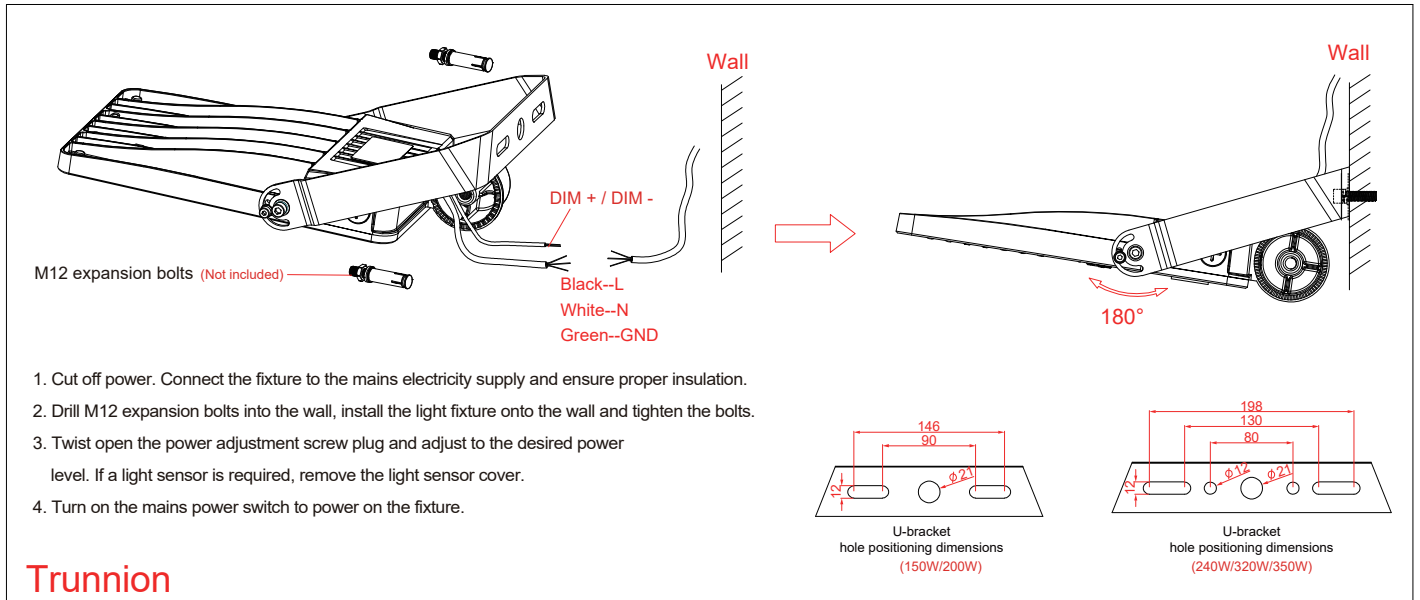

Power & CCT Selections:

Power Selections:


There are power options(L/M/H),please select the power according to your needs.
Warning Turn off the lamp when adjusting the power to: avoid damage to the lamp.

	L	M	H
PL-150W	90W	120W	150W
PL-200W	120W	160W	200W
PL-240W	144W	192W	240W
PL-320W	192W	256W	320W
PL-360W	216W	288W	360W

CCT Selections.

There are 3 color temperatures available (CW/NW/WW),
Please select the color temperature you prefer before installation.

WW	NW	CW
3000K	4000K	5000K

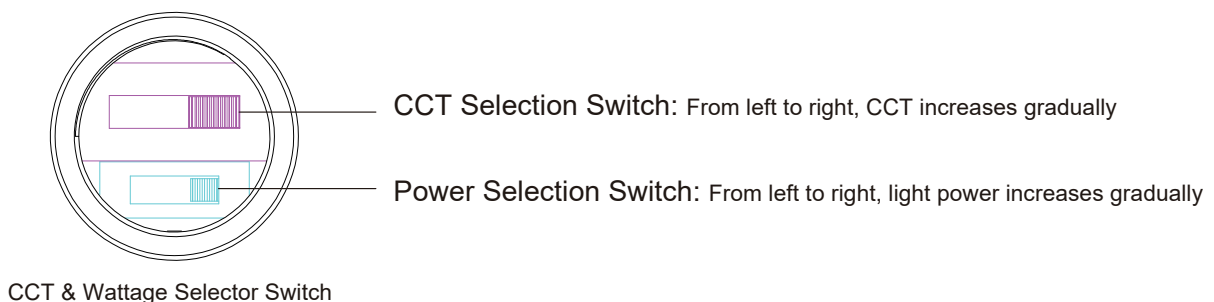

There are power options(L/M/H),please select the power according to your needs.

*** WARNING:** Turn off the lamp when adjusting the power to avoid damage to the lamp.